



AsantéFAST™ 10/100 Adapter for NuBus READ ME FIRST!

Thank you for purchasing an Asanté Ethernet product!

Mail Us Your Registration for LIFETIME Warranty

Please mail in your product registration card to receive free technical support. By returning your registration card, you will also receive new information on updates and new products.

About AsantéFAST 10/100 Adapter for NuBus

The AsantéFAST 10/100 adapter provides 100BASE-TX and 10BASE-T Ethernet connectivity. It automatically configures for 10Mbps or 100Mbps operation with NWay auto-negotiation. The adapter works on any NuBus-based Macintosh.

Asanté Installer Diskette

The Asanté Installer Diskette included with your adapter contains the device driver, the TroubleShooter and ADLS diagnostic software. Instructions are included in the Installation Guide.

Quick Start Instructions:

1. Install the adapter in the computer.

For 100BASE-TX operation, a Category 5 Unshielded Twisted Pair (UTP) network cable needs to be connected to a 100BASE-TX hub or a wall socket connected to a 100BASE-TX network. For 10BASE-T operation, a Category 3,4, or 5 UTP cable can be used.

You do not need to set any jumpers or switches on the adapter. The AsantéFAST 10/100 adapter supports NWay™ auto-negotiation which allows the connected devices to automatically connect at the appropriate speed (10Mbps or 100Mbps) without user intervention.

2. Install the network driver.

Launch the Installer program from the Installer Diskette and use Easy Install to install the network driver in your Macintosh.

3. Test the adapter.

Run the Troubleshooter diagnostic program included in the Installer Diskette to ensure that the adapter is operating properly.

4. Accessing Network Services

To make the connection between your Macintosh and the Ethernet network, you need to activate AppleTalk in the Chooser dialog box and select EtherTalk slot in the Network control panel.